


# RUIZU Music Player D05

## User Manual

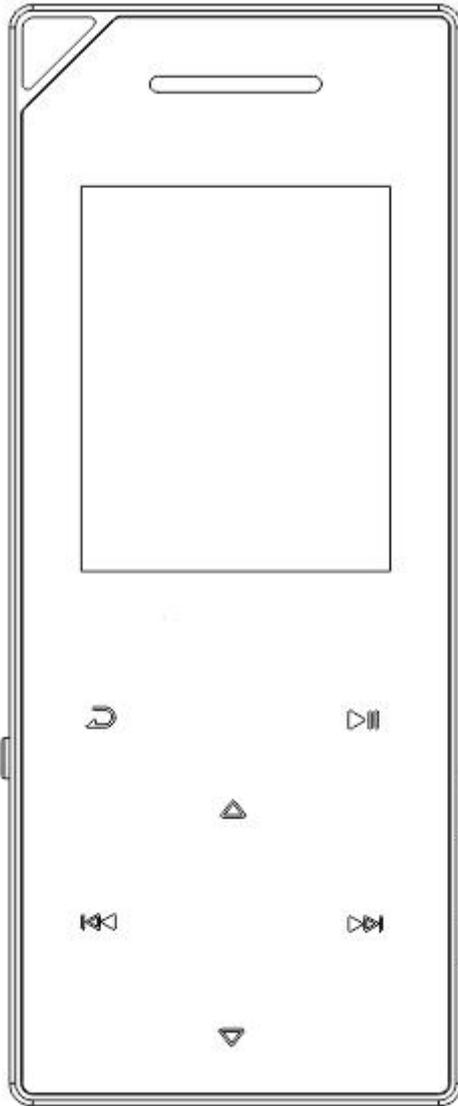

RUIZU Customer Service

[ruizuservice@hotmail.com](mailto:ruizuservice@hotmail.com)

## User Guide

Quick Guide.....	1
Basic Operations.....	2
1.Charge the Player.....	3
2.Power On/Off.....	3
3.Date Transfer.....	3
4.Lock Screen.....	4
5.Return.....	4
6. Volume Adjustment.....	4
Music.....	5
1. Rewind/Forward.....	5
2. Settings.....	5
2.1 Play mode.....	6
2.1.1 Play music from.....	6
2.1.2 Repeat.....	6
2.1.3 Shuffle.....	6
2.1.4 Repeat Settings.....	6
2.2 Sound settings.....	7
2.2.1 Equalizer.....	7
2.2.2 Variable speed playback.....	7
2.2.3 Volume limit.....	7

2.3 Add to playlist.....	8
2.4 Remove from playlist.....	8
2.5 Delete.....	8
2.6 Bookmarks.....	8
Movie.....	9
Radio.....	10
Photo.....	12
Record.....	13
1.Start voice recording.....	13
2.Recordings library.....	13
3.Record Format.....	13
4.Record Setting.....	13
Ebook.....	14
Folder.....	16
Bluetooth.....	17
Setting.....	18
1. Step.....	18
2. Calendar.....	18
3. Stopwatch.....	19
Support and Troubleshooting.....	20
Specifications.....	22


## Quick Guide

While the player is powered on, touch direction buttons to access to its 9 different functions, including Music, Movie, Radio, Photo, Record, Ebook, Folder, Bluetooth, Setting. Touch  button to enter.

Plug your earphone into the jack to enjoy the music and radio you like.

Note: The player will into sleep mode automatically without operation within 1 minute. Hold the power button for 3 seconds to wake it up.

# Basic Operations

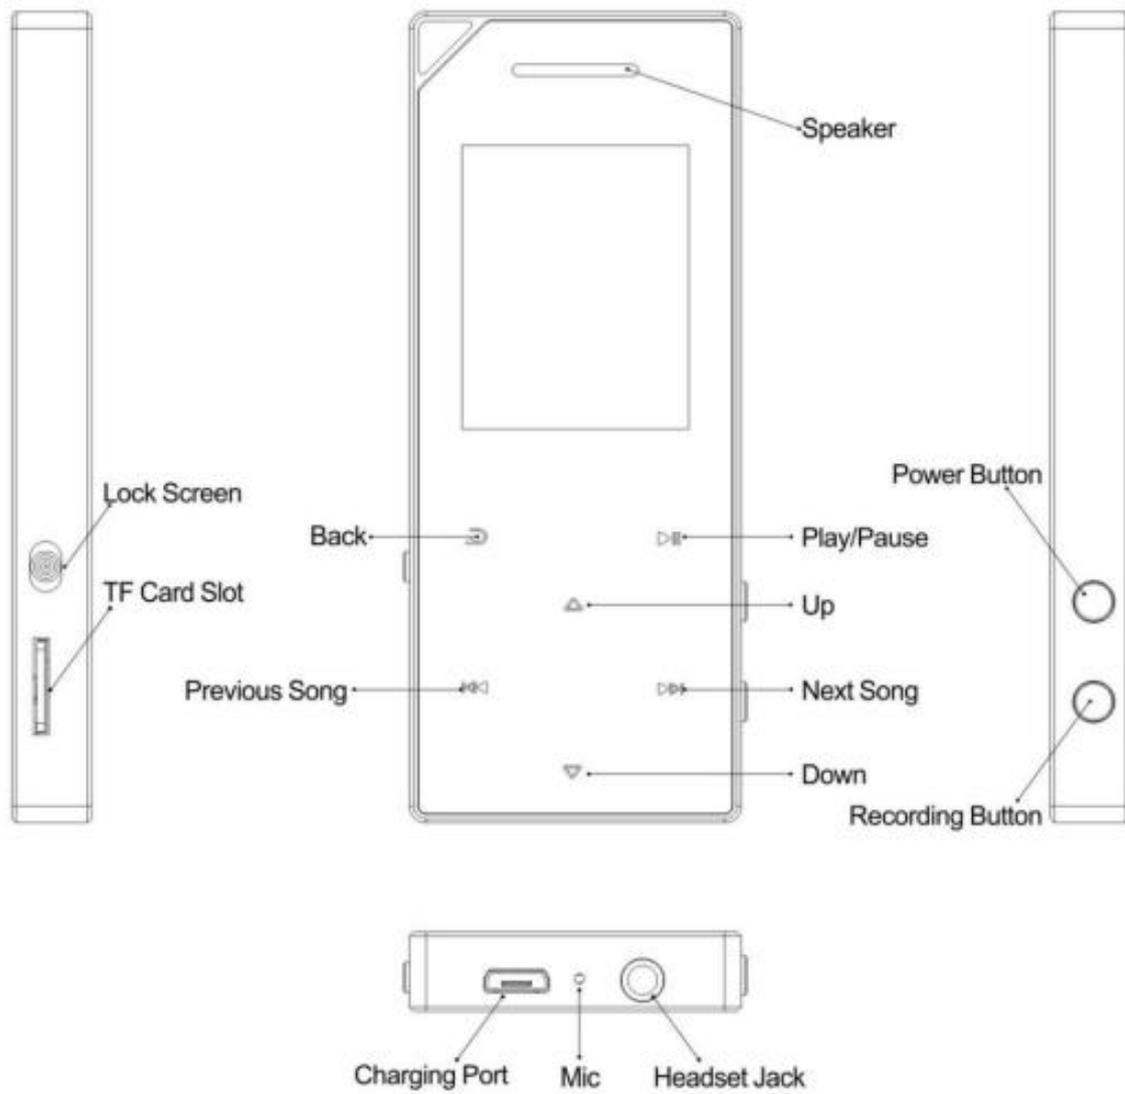

## **1.Charge the Player**

1. Plug the attached USB cable into the USB port of a computer to charge the player.

When you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An indicate on the top right will show the charging statue.

2. Use only the 5V/500mA charger for charging or it may lead to product failure.

## **2.Power On/Off**

Hold the Power button 3 seconds on the right to turn on/off the player.

## **3.Date Transfer**

Plug it into your computer and copy over media files with the attached USB cable as if it were a flash driver or use music management software such as Windows Media Player to transfer the files.

Note: if your computer cannot detect the MP3 Player, try to update your USB driver or use another cable.

If it still can't work for you. Ask RUIZU Customer Service for additional help (See Cover)

#### **4.Lock Screen**

Use the switch on the left to lock the screen. Repeat to unlock.

Note: Lock Screen will make buttons not working. If you accidentally locked your screen , just use the switch to unlock.

#### **5.Return**

While on playing interface, touch the button  to exit.

#### **6. Volume Adjustment**

While on playing interface, touch  /  to adjust sound volume.

Note: There's a built-in speaker in RUIZU D05 MP3 Player, the speaker will turn on automatically when no earphones are plugged in.

## Music

Touch  button with “Music” on main interface to access to its function. And then a related list will show as follows:

Now Playing: View the music currently playing.

All songs: View the music list in alphabet order.

Artists: Play songs from Artist you like.

Albums: Play songs from Album you like.

 
Genres: Play songs from Genres you like.

Album art: View the covers of album.

Playlists: Play songs from 1 of 3 playlists.

UpdatePlaylist: Update the Data you just edited.

### 1. Rewind/Forward

While it's on music playing interface, touch button  to go to the previous/next song.

Hold button  for fast rewind/ forward.

### 2. Settings

While it's on music playing interface, hold  button to access to its sub-menu. The related list will show:

## **2.1 Play mode**

### **2.1.1 Play music from...**

...All song: Play all songs in your mp3 player.

...this artists: Play songs by certain artist.

...this album: Play songs by certain album.

...this genre: Play songs by certain genre.

### **2.1.2 Repeat**

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the audio currently playing.

Repeat all: Play all of your audios and repeat.

View Playing: View the audio currently playing.

### **2.1.3 Shuffle**

Turn on/off shuffle mode.

### **2.1.4 Repeat Settings**

There are 3 options in Repeat Settings:

Repeat mode: Play music as A-B loop.

1) Enter Replay Mode, an "A" on the bottom left will flash. touch button ►► to set a start time.

2) The “B” on the bottom left will flash once you touch button ►►. Touch button ►► again to set an end time and begin A-B loop, or touch button ◀◀ to reset a start time.

3) touch button ►► again to end the A-B loop.

Replay Times: Set how many times will A-B loop play.

Replay Interval: Set how many seconds interval at the beginning of A-B loop play.

## **2.2 Sound settings**

### **2.2.1 Equalizer**

Choose from the 7 sound effects, or choose "off" to turn off equalizer.

### **2.2.2 Variable speed playback**

Adjust speed from -8(Slowest) to +8(Fastest).

MP3 and WAV format only.

### **2.2.3 Volume limit**

Adjust Maximum volume capacity.

### **2.3 Add to playlist**

Add the currently playing song to 1 of 3 playlists.

### **2.4 Remove from playlist**

Remove the currently playing song from 1 of 3 playlists.

### **2.5 Delete**

Delete the currently playing song from Mp3 player or card.

### **2.6 Bookmarks**

Add bookmark: Save audio play at certain time as bookmark.

Go to bookmark: Go to your saved bookmark.

Delete bookmark: Delete saved bookmark

## Movie

Touch  button with “Movie” on main interface to access to its function.

## Settings

While it's on video playing interface, hold  button to access to its sub-menu. The related list will show:

**Brightness:** Adjust brightness of screen.

### Repeat:

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the video currently playing.

Repeat all: Play all of your videos and repeat.

**Delete video:** Delete the currently playing video.

**UpdatePlaylist:** Update the Data you just edited.

Note: This player can only support the AMV format in 160\*128, you should convert video files by format conversion software first.

## Radio

Touch  button with “Radio” on main interface to access to its function. And then a related list will show as follows:

Note: Wired headphones are required as antenna for FM radio function.

**Presets:** Play the FM radio frequency you saved before.

**Manual tune:** Manual Searching FM signal (87.50-107.00Hz).

**Auto tune:** Auto Searching FM signal and save to “Presets”.

**FM Recording:** Play recorded FM radio.

## Settings

While on radio playing screen, hold  button go to its sub-menu. A related list will show:

## **Start FM radio recording**

Record current playing FM radio.

## **Radio background**

Turn on/off Radio background.

## **Save to presets**

Save current FM frequency to “Presets”.

## **Clear preset**

Clear one of saved FM frequency from “Presets”.

## **Auto tune**

Auto Searching FM signal and save to “Presets”.

## **Tuner Region**

Select among Common Band, Japan Band,  
European Band

## **FM Recording**

Play recorded FM radio.

## Photo

Touch  button with “Pictures” on main interface to access to its function.

## Settings

While it's on picture viewing interface, hold  button to access to its sub-menu. The related list will show:

**Brightness:** Adjust brightness of screen.

**Backlight timer:** Set time backlight turn off.

### **Slide show settings:**

Time per slide: Set how many seconds for a slide.

Repeat: Turn on/off repeat mode.

Shuffle: Turn on/off shuffle mode.

Thumbnail: Turn on/off thumbnail mode.

**Delete picture:** Delete the currently viewing picture.

## **Record**

Touch  button with "Record" on main interface to access to its function. And then a related list will show as follows:

### **1.Start voice recording**

Select "Start voice recording" and touch  button to start your recording. touch  and then  button to save your recording; When it's on recording interface, touch  button to pause or start.

### **2.Recordings library**

View your recording files in "Recordings library".  
Touch  button to play the recordings. Touch  /  to go to the previous/next recording.

### **3.Record Format**

Select a format among MP3, WAV.

### **4.Record Setting**

Select rec bit rate: Select among 512/768/1024/1536 kbps.

## **Ebook**

Touch  button with "Ebook" on main interface to access to its function.

Please kindly note this player only can recognize the article in TXT format. touch middle button to enter.

## **Auto Play**

While reading the text, touch  button to play automatically, touch again to back to normal playing.

## **Settings**

While on text reading scene, hold  button to go to its sub-menu. A related list will show:

### **Play setting**

Set how many seconds per page for auto play.

### **Ebook background**

Set a background color for Ebook.

## **Delete ebook**

Delete the ebook you current reading.

## **Bookmark Select**

Select a bookmark added before.

## **Delete bookmark**

Delete a bookmark added before.

## **Add bookmark**

Add a bookmark on current page.

## **Page Select**

Select a page you want to go.

## **Folder**

Touch  button with “Folder” on main interface to access to its function.

All the files and folders in the player will be listed. If the micro SD card is inserted, you can choose to go to "Local folder" or "Card folder".

**Note: Create your own folders to sort your songs.**

## Bluetooth

Touch  button with “Bluetooth” on main interface to access to its function. And then a related list will show as follows:

Bluetooth switch control: Turn on/off Bluetooth function.

Search for device: Searching nearby Bluetooth device.

Device List: View paired Bluetooth devices.

Select “Search for device” to search nearby Bluetooth device.

Select device name and and choose “match” to pair. After pairing complete, go back and play your musics.

Note: Plug in wired headphones when play FM radio in Bluetooth Mode.

Note: **Movie, Photo, Record, and Step** can not be used during Bluetooth Mode.

## Setting

Touch  button with “Setting” on main interface to access to its function. And then a related list will show as follows:

**Tools:** Select among Step, Calendar, and Stopwatch.

### 1. Step

**Start step:**

S: step counts

D: distance traveled

C: calories burned

S: walking speed

T: elapsed time

Click button  and choose "Yes"/"No" to save the record.

**Personal info:** set your step length.

**History:** View up to 7 history records.

**Clear history:** Clear one of your history records.

Please note: Step function can not be used in Bluetooth mode.

## 2. Calendar

Choose "Calendar", touch button  to access to its function and view the date and time. touch button  to go back.

## 3. Stopwatch

Choose "Stopwatch", touch button  to access to its function. Touch  again to start the timer, then touch again to stop/resume. Touch  to start a new one. Touch  to go back.

Please note: the maximum Stopwatch list is 5.

**Shutdown settings:** Set Sleep timer and Power management.

**Display:** Set Brightness, Backlight timer, and Screen saver.

**Button lights:** Set button lights on/off

**Date and time:** Set Date and time.

**Language:** Select a system language.

**Information:** Show information about system and disk space.

**Format device:** Delete all data in Mp3 system.

**Default settings:** Reset to Factory settings.

## **Support and Troubleshooting**

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk.

You can create folders in the disk to sort your music.

Q: Why my computer can't detect mp3 player?

A: RUIZU Mp3 player can be paired for all computer system with latest USB driver. Please update your USB driver before plug in Mp3 player or try another charging cable. If you still can't connect RUIZU Mp3 Player to your computer, please contact RUIZU customer service team for additional help(See Cover).

Q: How can I continue audio play after turn the player off?

A: You can not continue your play after turn off the player. However, if the player is in sleep mode, you

can continue your play by wake it up. See “Basic Operations” about how to get into sleep mode.

Q: Why buttons on the player can't work?

A: Sometime customer will accidentally active lock screen function which prevent button been used. Please see”Lock Screen” to unlock the button. If it still won't work for you, please contact RUIZU Customer Service to claim your warranty. See Cover.

## Specifications

Screen	1.8" LCD screen
Weight	86g
Dimension	97*39*9mm
Flash memory	8G
Audio format	MP3/WAV/APE/WMA/FLAC etc.
Video format	160*128 AMV(converted video)
Recording format	MP3/WAV
Recording range	5-8 meters
Playing time	80 hours earphones/8 hours speaker
Battery	3.7 V/420 mAh
Charging time	1-1.5 hours
SD card expansion	Up to 128G
Lyric Format	LRC

Any more problems, please feel free to contact with our customer service at [ruizuservice@hotmail.com](mailto:ruizuservice@hotmail.com)