


RUIZU[®]

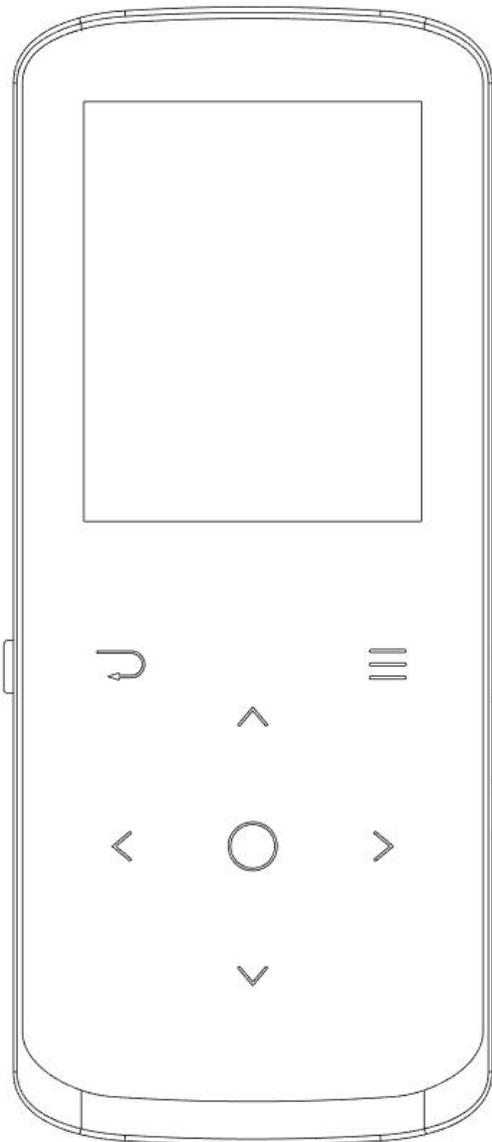


RUIZU D50 User Manual

Customer Service : ruizuservice@hotmail.com

Button control.....	1
1.Power On/Off.....	2
2.Main interface.....	2
3.Volume Adjustment.....	2
4.Fast Rewind/Forward.....	2
5.Last song/Next song.....	2
6.Screen lock/unlock.....	3
7.Charge the player.....	3
Bluetooth.....	3
Music.....	4
Movie.....	5
Recordings.....	6
FM Radio.....	6
Ebook.....	7
Photo.....	7
Setting.....	7
Support and Troubleshooting	9
Specification.....	11

Buttons & Controls

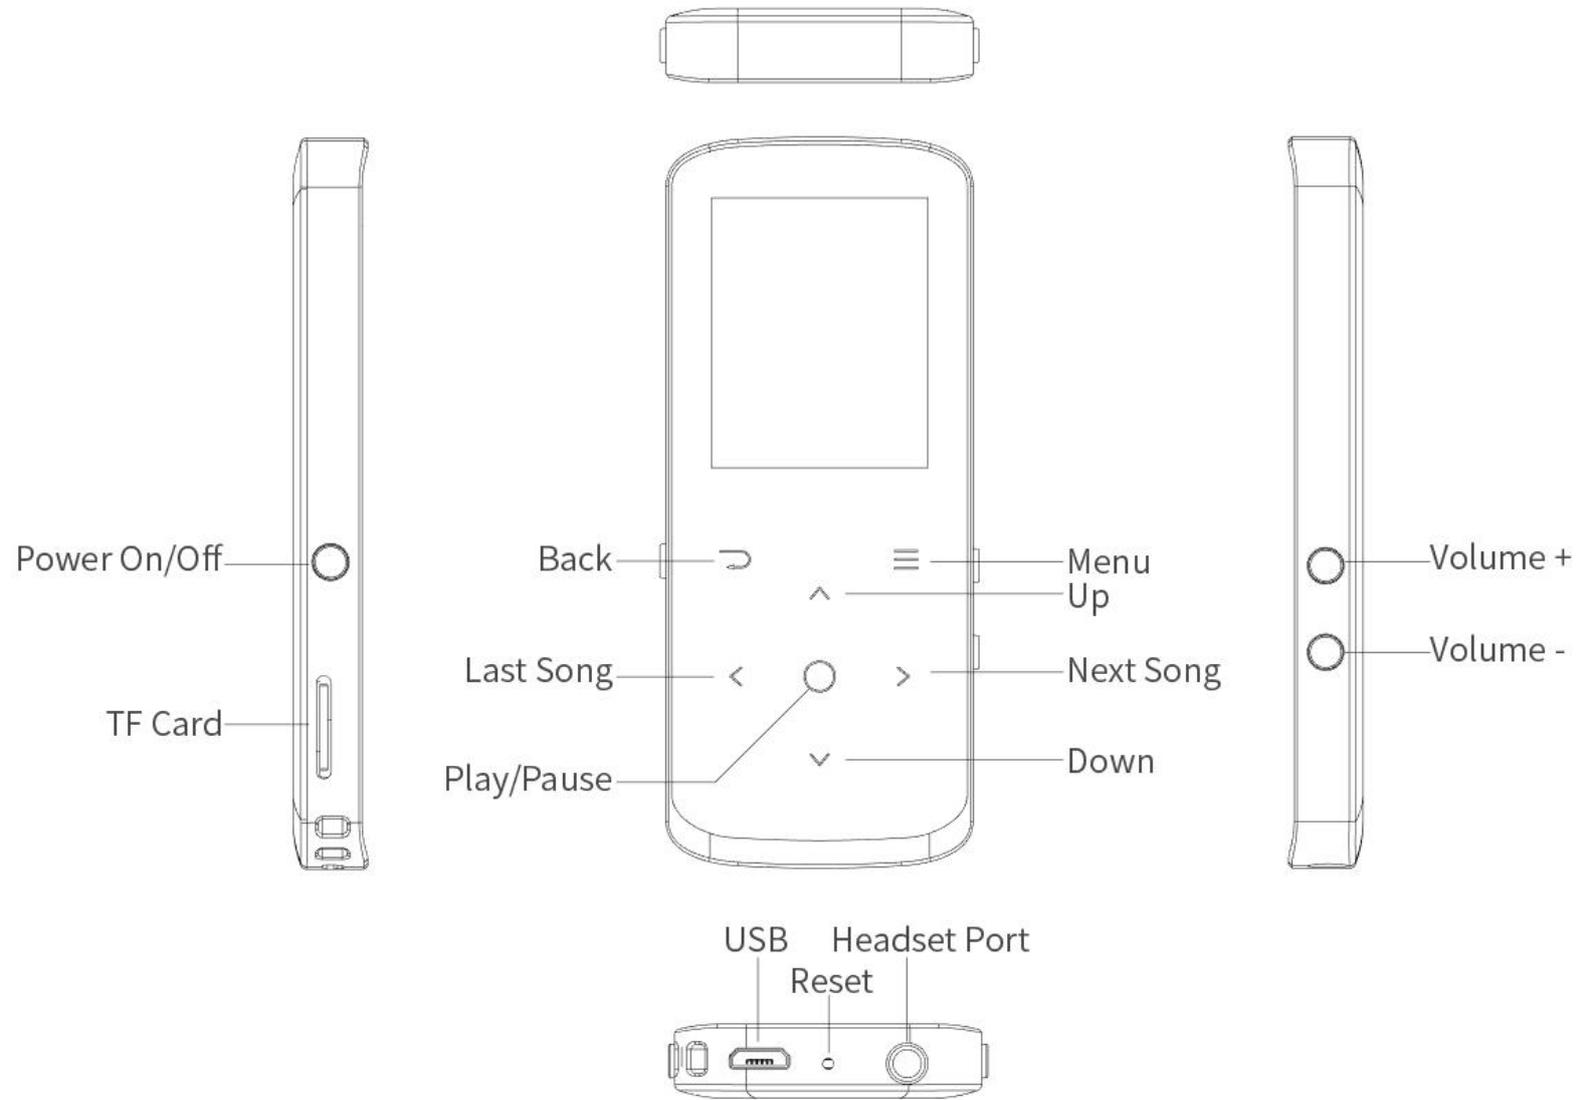

1.Power On/Off

Power On: Hold the Power Button for a few second to turn on the mp3 player

Power Off: When the mp3 player power on, hold the Power Button to turn off the mp3 player

2.Main interface

Each time you press the button  /  , it will bring you to one of its 9 different functions, including Music,Video , FM Radio,Picture,Bluetooth,E-Book,Folder, Recordings , Setting Press the button  to return back to previous menu.

3.Volume Adjustment

While on Music/Video/FM Radio playing interface, touch / to adjust sound volume.

Under any interface click the Volume +/- to turn up / down the volume.

4.Fast Rewind/Forward

While it's on Music/Video playing interface Hold button  /  for fast rewind / forward.

5.Last song /Next song

While it's on Music/Video playing interface, touch button / to go to the previous/next song.

6.Screen Lock/unlock

Press the power button to lock the screen. Repeat to unlock.

7.Charge the Player

1).By USB cable

Connect the mp3 player with computer by the USB cable can both be used for data transfer and charging the player.

2).By connecting to charger(Not included)

Please note: The specifications of the charger must meet the following requirements or any accident or failure happened will be regarded as man-made damage.

Input: AC110-240V 50/60Hz Max:100mA

Output: DC5.0-5.5V 500mA-800mA

Bluetooth

Touch ►|| button with “**Bluetooth**” on main interface to access to its function. “Please wait....” will displaying on the interface. The mp3 player will auto search the Bluetooth device around, All the Bluetooth device (including the history connected Bluetooth device)will listed on the device menu. Choose the right Bluetooth device and press the ►||button to start connect.

After connected the mp3 player with Bluetooth speaker or

Bluetooth headset. Press back button  return to main menu, then enter to “Music” function and playing music. Then you can enjoy your music with Bluetooth speaker or Bluetooth headset.

Please Note: Turn on your Bluetooth speaker or Bluetooth headset before you want to connect them with your mp3 player.

Bluetooth on/off: Bluetooth open / off

Search for device: Search the Bluetooth device around, (if there have history Bluetooth device listed on the menu, you could cancel all the history Bluetooth device at first, after you cancel all the history please search again for the newest Bluetooth device around)

Device List: all the Bluetooth device will be listed on this menu.

Music

Touch  button with “**Music**” on main interface to access to its function. On the “Music” menu click  /  to choose the option on the menu, and click  to confirm.

1) Volume Adjustment

While on Music playing interface, touch  /  to adjust sound volume. Also you could click the Volume +/- to turn

up / down the volume.

2)Fast Rewind/Forward

While it's on Music/Video playing interface Hold button  /  for fast rewind / forward.

3)Last song /Next song

While it's on Music/Video playing interface, touch button  /  to go to the previous/next song.

On the Music playing interface, click the “” Button enter to the playing settings menu.

Play mode

Repeat:

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the audio currently playing.

Repeat all: Play all of your audios and repeat.

View Playing: View the audio currently playing.

Shuffle: Turn on/off shuffle mode.

Movie

Touch  button with “Movie” on main interface to access to its function

Remark: This player can only support the AMV format in 160*128, you should convert video files by format conversion software first.

Recordings

Select "Record" on main interface, click button ▶|| to access to its function, then a related list will show as "Start Voice Recording", "Recordings library", "Storage"(only available with card inserted), "Record Format" and "Record Settings".

FM Radio

Select "FM Radio" on main menu, click button ▶|| to access to its FM Radio playing interface, you could click ◀◀ / ▶▶ to select the Radio station.

Note: Wired headphones are required as antenna for FM radio function.

On the FM radio playing interface, click “☰” button enter to the FM radio menu. A related list will show including:

Start FM radio recording: click ▶|| start voice recording

Radio background: Open / close

Save: all the saved station will listed here

Clear preset: clear the preset stations

Auto Tune:

Tuner Region: choose from Common /Japan /European Band.

FM Recording:all saved recordings will be listed here.

Ebook

Touch ► button with "Ebook" on main interface to access to its function. On the "E-book" menu click ▲ / ▼ to choose the TXT article on the menu, and click ► to confirm.

When read the TXT article, click ► to will auto play, click again to stop.

Please kindly note this player only can recognize the article in TXT format.

Picture

Touch ► button with "Photo" on main interface to access to its function. On the "Photo" menu click ▲ / ▼ to choose the picture files listed on the menu and click ► to confirm.

Settings

Touch ► button with "Settings" on main interface to access to its function. And then a related list will show as follows:

Tools

Calendar

Choose "Calendar", touch button ► to access this function and view the date and time. Touch button ↶ to

go back.

Stopwatch

Choose "Stopwatch", touch button ▶|| to access this function. Touch ▶|| again to start the timer, then touch again to stop/resume. Touch ▼ to start a new one. Touch to go back.↶

Please note: the maximum Stopwatch list is 5.

Alarm

Choose "Alarm", touch button ▶|| to access this function and set the alarm on/off /time /cycle /music /volume you want.

Pedometer:

Chose Pedometer click ▶|| a related list will show as

Start Step: choose this option click ▶|| to start

Personal information: set the Height/weight/step length

History: all the pedometer history will show on the list

Clear history: clear the history of pedometer.

Language

Select among 1 of 26 languages.

Display settings

Brightness: Set screen brightness.

Backlight Time: Set time of screen backlight.

Screensaver: Turn on/off screen saver.

Shutdown settings

Sleep timer: Set time into sleep mode.

Power off: Set time for auto shutdown.

Button lights

Turn on/off the button lights. Normal

Date and time

Set Date and time on the MP3 player..

Format device

Delete all data in Mp3 system.

Information

View system info and memory space on the device

Factory settings

Reset system to factory setting.

Support and Troubleshooting

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk.

You can create folders in the disk to sort your music.

Q: Why my computer can't detect mp3 player?

A: RUIZU Mp3 player can be paired for all computer system with latest USB driver. Please update your USB driver before plug in Mp3 player or try another charging cable. If you still can't connect RUIZU Mp3 Player to your computer, please contact RUIZU customer service team for additional help(See Cover).

Q: How can I continue audio play after turn the player off?

A: You can not continue your play after turn off the player. However, if the player is in sleep mode, you can continue your play by wake it up. See "Basic Operations" about how to get into sleep mode.

Specification

Screen	1.8" TFT screen
Weight	78 g
Dimension	39mm*10mm*95mm
Flash Memory	8GB/16GB
TF Card	Support expandable up to 128GB
Audio Format	MP3/WAV/APE/WMA/FLAC /OGG etc.
USB port	Micro USB 2.0 (Support USB 3.0)
Bluetooth Version	Bluetooth 4.1 version
Video format	128*160 AMV (converted video)
Picture format	JPEG BMP GIF
Recording format	MP3/WAV
Recording distance	5~8 meters
Playing time (by earphone)	30 hours (The volume keep in middle level)
Playing time (by speaker)	5~10 hours (The volume keep in middle level)
Battery	Built-in Li battery
Charging time	2 ~3 hours