

# RUIZU Music Player X18

## User Manual



RUIZU Customer Service

[ruizuservice@hotmail.com](mailto:ruizuservice@hotmail.com)

# User Guide

Quick Guide.....	1
Basic Operations.....	2
1.Charge the Player.....	3
2.Power ON/OFF and Sleep Mode.....	3
3.Date Transfer.....	4
4.Lock Screen.....	4
5.Return.....	5
6.Volume Adjustment.....	5
Music.....	6
1. Rewind/Forward.....	6
2. Settings.....	6
2.1 Home.....	7
2.2 Play mode.....	7
2.2.1 Play music from.....	7
2.2.2 Repeat.....	7
2.2.3 Shuffle.....	7
2.2.4 Language learning.....	7
2.3 Sound settings.....	8
2.3.1 Equalizer.....	8
2.3.2 Speed.....	8


2.4 Delete.....	9
2.5 Bookmarks.....	9
2.6 Add to playlist.....	9
2.7 Remove from playlist.....	9
Bluetooth.....	10
Folder.....	11
Setting.....	13
Record.....	14
1.Start voice recording.....	14
2.Recordings library.....	14
3.Record Format.....	14
4.Record Setting.....	14
Tools.....	15
1. Video.....	15
2. Calendar.....	15
3. Stopwatch.....	16
4. Alarm.....	16
Pictures.....	17
Ebook.....	18
Radio.....	20
Support and Troubleshooting.....	22
Specifications.....	24

## Quick Guide

While the player is powered on, click button ◀/▶ to access to its 9 different functions, including Music, Bluetooth, Folder view, Set, Recordings, Tools, Pictures, Ebook, FM Radio. Press ▶ button to enter.

Plug your earphone into the jack to enjoy the music and radio you like.

# Basic Operations

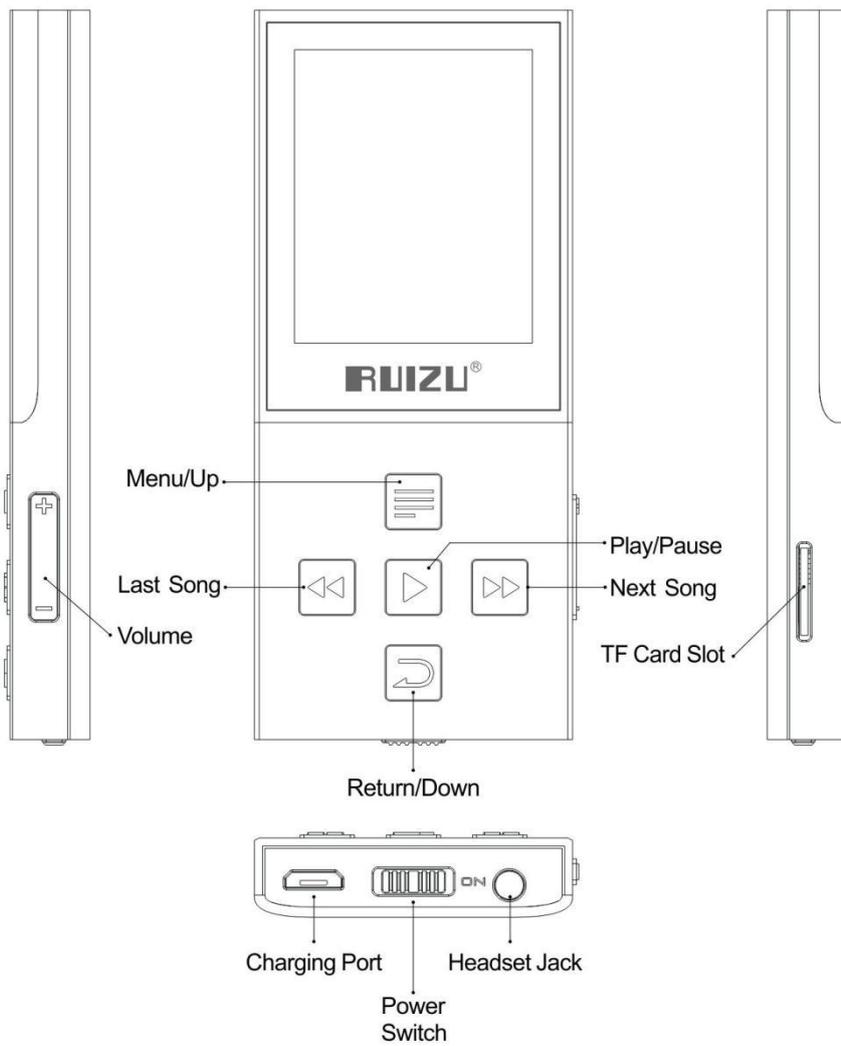

## **1.Charge the Player**

1.Plug the attached USB cable into the USB port of a computer to charge the player. When you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An indicate on the top right will show the charging statue.

2.Use only the 5V/500mA charger for charging or it may lead to product failure.

## **2.Power ON/OFF and Sleep Mode**

Power on/off

Turn the slider switch on the bottom at “on” to power it up.

Sleep Mode

While the slider switch button is in “on”, hold the ► button for 3 seconds into sleep mode or wake it up. Your last playing will be saved in sleep mode.

Note: Please make sure power switch at “on”, while sleep mode operates.

### **3.Date Transfer**

Plug it into your computer and copy over media files with the attached USB cable as if it were a hard drive or use music management software such as Windows Media Player to transfer the files.

Note: if your computer cannot detect the MP3 Player, try to update your USB driver or use another cable. If it still can work for you. Ask RUIZU Customer Service for additional help (See Cover)

### **4.Lock Screen**

Hold button  for 3 seconds to lock the screen. Repeat to unlock.

Note: Lock Screen will make buttons not working. If you accidentally locked your screen , just hold  button 3s to unlock.

## **5.Return**

While on playing interface, Press the button  to exit, and the press the left arrow button  continually to back to the main menu.

While on sub menu, press the button  to up level menu.

## **6.Volume Adjustment**

Click the button +/- on the left side to increase/decrease the volume.

# Music

Press ► button with “Music” on main interface to access to its function. And then a related list will show as follows:

Now Playing: View the music currently playing.

All songs: View the music list in alphabet order.

Artists: Play songs from Artist you like.

Albums: Play songs from Album you like.

Genres: Play songs from Genres you like.

Album art: Show the cover of albums.

Playlists: Play songs from 1 of 3 playlists.

Update Card Data: Update the playlist you just edited.

## 1. Rewind/Forward

While it's on music playing interface, click button ◀ / ▶ to go to the previous/next song.

Hold button ◀◀ / ▶▶ for fast rewind/ forward.

## 2. Settings

While it's on music playing interface, click ☰ button to access to its sub-menu. The related list will show:

## **2.1 Home**

Back to main interface.

## **2.2 Play mode**

### **2.2.1 Play music from**

All song: Play all songs in your mp3 player.

this artists: Play songs by certain artist.

this album: Play songs by certain album.

this genre: Play songs by certain genre.

### **2.2.2 Repeat**

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the audio currently playing.

Repeat all: Play all of your audios and repeat.

View Playing: View the audio currently playing.

### **2.2.3 Shuffle**

Turn on/off shuffle mode.

### **2.2.4 Language learning**

There are 3 options in Language learning:

Repeat mode: Play music as A-B loop.

1) Enter Replay Mode, an "A" on the bottom left will flash. touch button ►► to set a start time.

2) The "B" on the bottom left will flash once you touch button ►►. Touch button ►► again to set an end time and begin A-B loop, or touch button ◀◀ to reset a start time.

3) touch button ►► again to end the A-B loop.

Replay Times: Set how many times will A-B loop play.

Replay Interval: Set how many seconds interval at beginning of A-B loop play.

## **2.3 Sound settings**

### **2.3.1 Equalizer**

Choose from the 7 sound effects, or choose "off" to turn off equalizer.

### **2.3.2 Speed**

Adjust speed from -8(Slowest) to +8(Fastest).

MP3 and WAV format only.

## **2.4 Delete**

Delete the currently playing song from Mp3 player or card.

## **2.5 Bookmarks**

Add bookmark: Save audio play at certain time as bookmark.

Go to bookmark: Go to your saved bookmark.

Delete bookmark: Delete saved bookmark

## **2.6 Add to playlist**

Add the currently playing song to 1 of 3 playlists.

## **2.7 Remove from playlist**

Remove the currently playing song from 1 of 3 playlists.

# Bluetooth

Press ► button with “Bluetooth” on main interface to access to its function. And then a related list will show as follows:

Bluetooth On/Off: Turn on/off Bluetooth function.

Search for device: Searching nearby Bluetooth device.

Device List: View paired Bluetooth devices.

Select “Search for device” to search nearby Bluetooth device.

Select device name and choose “match” to pair.

After pairing complete, go back and play your musics.

Note: Plug in wired headphones when play FM radio in Bluetooth Mode.

Note: Video, Pictures, Record can not be used during Bluetooth Mode.

## Folder

Press ► button with “Folder” on main interface to access to its function.

All the files and folders in the player will be listed. If the micro SD card is inserted, you can choose to go to "Local folder" or "Card folder".

Note: Create your own folders to sort your songs.

### **For Audio book lover:**

Almost all mp3 players are based on flash driver, which have different format from PC's hardware disk. Different format causes different sorting algorithm for file name, which is a big trouble to customer who need audios, such as audio book, play in certain order.

To solve this issue, the easiest trick is to sort files by edit time.

Here's the instruction about how to do that.

- 1, Prepare the audio files and sort them on PC.
- 2, Select all files and do not copy (Important).

3, Move your mouse cursor to the first file, then copy.

4, Paste files to mp3.

5, Unplug mp3 and go to "Folder" to find your audio files.

Your audio files should be in correct order, the first file be pasted is the first file be edited. And you can also create folders to help you sort your audio books.

## Setting

Press ► button with “Setting” on main interface to access to its function. And then a related list will show as follows:

**Language:** Select among 1 of 27 system languages.

**Display settings:** Set Brightness, Screen saver, Backlight timer.

**Shutdown setting:** Set Sleep timer and Power.

**Date and time:** Set Date and time.

**Format device:** Delete all data in Mp3 system.

**Information:** Show information about system and disk space.

**Factory settings:** Reset to Factory Default.

# Record

Press ► button with “Recordings” on main interface to access to its function. And then a related list will show as follows:

## 1.Start voice recording

Select "Start voice recording" and click ► to start your recording. Press ↻ and then click ► to save your recording;

When it's on recording interface, click the button ► to pause or start.

## 2.Recordings library

View your recording files in "Recordings library". Click button ► to play the recordings. Click ◀/▶ to go to the previous/next recording.

## 3.Record Format

Select a format between MP3 and WAV.

## 4.Record Setting

Select rec bit rate: Select among 512/768/1024/1536kbps.

# Tools

Select "Tools" on main interface, click button A related list will show "Video", "Calendar", "Stopwatch", "Alarm".

## 1. Video

This player can play AMV format video in 160\*128, you should convert video files by format convert software.

While it's on video playing interface, click  button to access to its sub-menu. The related list will show:

**Brightness:** Adjust the brightness of screen.

### Repeat:

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the video currently playing.

Repeat all: Play all of your videos and repeat.

**Delete video:** Delete the currently playing video.

**Update Card Data:** Update the playlist you just edited.

## 2. Calendar

Choose "Calendar", click button  to access to its function and view the date and time. Click button  to go back.

### **3. Stopwatch**

Choose "Stopwatch", click button ▶ to access to its function.

Click ▶ again to start the timer, then click ▶ again to stop/resume. Press ▶▶ to start a new one. Click ↶ to go back.

Please note: the maximum Stopwatch list is 5.

### **4. Alarm**

Choose "Alarm", click button ▶ to access to its function and set the alarm switch/time/cycle/music/volume you want.

## Pictures

Press ► button with “Pictures” on main interface to access to its function.

## Settings

While it's on picture viewing interface, click ☰ button to access to its sub-menu. The related list will show:

**Brightness:** Adjust the brightness of screen.

**Backlight timer:** Set time backlight turn off.

**Slide show settings:**

Time per slide: Set how many seconds for a slide.

Repeat: Turn on/off repeat mode.

Shuffle: Turn on/off shuffle mode.

**Delete picture:** Delete the currently viewing picture.

**Update Card Data:** Update the playlist you just edited.

## **Ebook**

Press ► button with "Ebook" on main interface to access to its function.

Please kindly note this player only can recognize the article in TXT format. Click ► button to enter. Press ≡/↶ to turn page.

## **Auto Play**

While reading the text, click button ► to play automatically, click again to back to normal playing.

## **Settings**

While on text reading scene, press ►► button to go to its sub-menu. A related list will show:

## **Playsetting**

Set how many seconds per page for auto play.

## **Brightness**

Adjust the brightness of screen.

## **Page color**

Select a background color when reading.

## **Delete ebook**

Delete the ebook you current reading.

## **Bookmark Select**

Select a bookmark added before.

## **Delete bookmark**

Delete a bookmark added before.

## **Add bookmark**

Add a bookmark on current page.

## **Select Page**

Select a page you want to go.

## Radio

Press ► button with “Radio” on main interface to access to its function. And then a related list will show as follows:

Note: Wired headphones are required as antenna for FM radio function.

Note: Plug in wired headphones when play FM radio in Bluetooth Mode.

Station list: Play the FM radio frequency you saved before.

Manual tune: Manual Searching FM signal (87.50-107.00Hz).

Auto tune: Auto Searching FM signal and save to “Station list”.

FM Recording: Play recorded FM radio.

## Settings

While on radio playing screen, press ≡ button to go to its sub-menu. A related list will show:

### Start FM radio recording

Record current playing FM radio.

## **Radio background**

Enable play FM radio in Main interface when turn on.

## **Clear preset**

Clear one saved FM frequency from “Station list”.

## **Auto tune**

Auto Searching FM signal and save to “Station list”.

## **Save**

Save current FM frequency to “Station list”.

## **Tuner Region**

Select among Common Band, Japan Band, and European Band.

## **FM Recording**

Play recorded FM radio.

## Support and Troubleshooting

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk. You can create folders in the disk to sort your music.

Q: Why my computer can't detect mp3 player?

A: RUIZU Mp3 player can be paired for all computer system with latest USB driver. Please update your USB driver before plug in Mp3 player or try another charging cable. It you still can't connect RUIZU Mp3 Player to you computer, please contact RUIZU customer service team for additional help(See Cover).

Q: Why can't play FM radio in Bluetooth Mode?

A: FM radio need wired headphones as antenna, Please see "FM radio" about how to play FM radio in Bluetooth mode.

Q: Why buttons on the player can't work?

A: Sometime customer will accidentally active lock screen function which prevent button been used. Please hold button 3s to unlock. If it still won't work for you, please contact RUIZU Customer Service to claim your warranty. See Cover.

## Specifications

Screen	1.8" LCD screen
Weight	38g
Dimension	93*40*10 mm
Flash memory	8G
Audio format	MP3/WAV/APE/WMA/FLAC etc.
Video format	160*128 AMV(converted video)
Recording format	MP3/WAV
Recording range	5-8 meters
Bluetooth range	5-10 meters
Playing time	100 hours for music playback
Battery	3.7 V/800 mAh
Charging time	1-1.5 hours
SD card expansion	Up to 128G
Lyric Format	LRC

Any more problems, please feel free to contact with our customer service at [ruizuserice@hotmail.com](mailto:ruizuserice@hotmail.com)