


RUIZU Music Player X19

User Manual

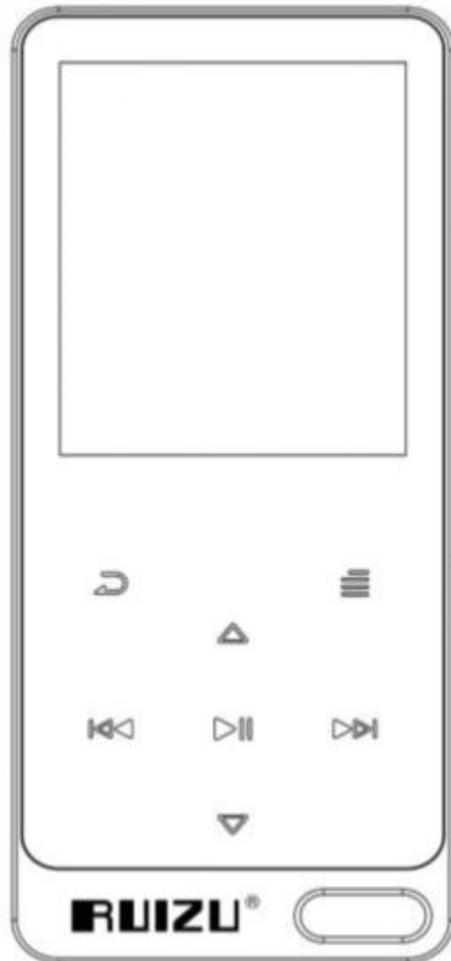

RUIZU Customer Service

ruizuservice@hotmail.com

User Guide

Quick Guide.....	1
Basic Operations.....	2
1.Charge the Player.....	3
2.Power On/Off.....	3
3.Date Transfer.....	3
4.Lock Screen.....	4
5.Return.....	4
6. Volume Adjustment.....	4
Record.....	5
1.Start voice recording.....	5
2.Recordings library.....	5
3.Record Format.....	5
4.Record Setting.....	6
Folder.....	7
Ebook.....	8
Pictures.....	10
Music.....	11
1. Rewind/Forward.....	11
2. Settings.....	11
2.1 Home.....	12
2.2 Shuffle.....	12

2.3 Repeat.....	12
2.4 Bookmarks.....	12
2.5 Play from.....	12
2.6 Delete.....	13
2.7 Sleep timer.....	13
2.8 Equalizer.....	13
2.9 Speed.....	13
2.10 A-B Repeat Mode.....	13
2.11 Add to playlist.....	14
2.12 Remove from playlist.....	14
Video.....	15
Tools.....	16
1.Calendar.....	16
2.Stopwatch.....	16
3.Alarm.....	16
Setting.....	17
Radio.....	18
Support and Troubleshooting.....	20
Specifications.....	22


Quick Guide

While the player is powered on, touch direction buttons to access to its 9 different functions, including Record, Folder, EBook, Pictures, Music, Video, Tools, Setting, Radio. Touch  button to enter.

Plug your earphone into the jack to enjoy the music and radio you like.

Note: The player will into sleep mode automatically without operation within 1 minute. Hold the power button for 3 seconds to wake it up.

Basic Operations

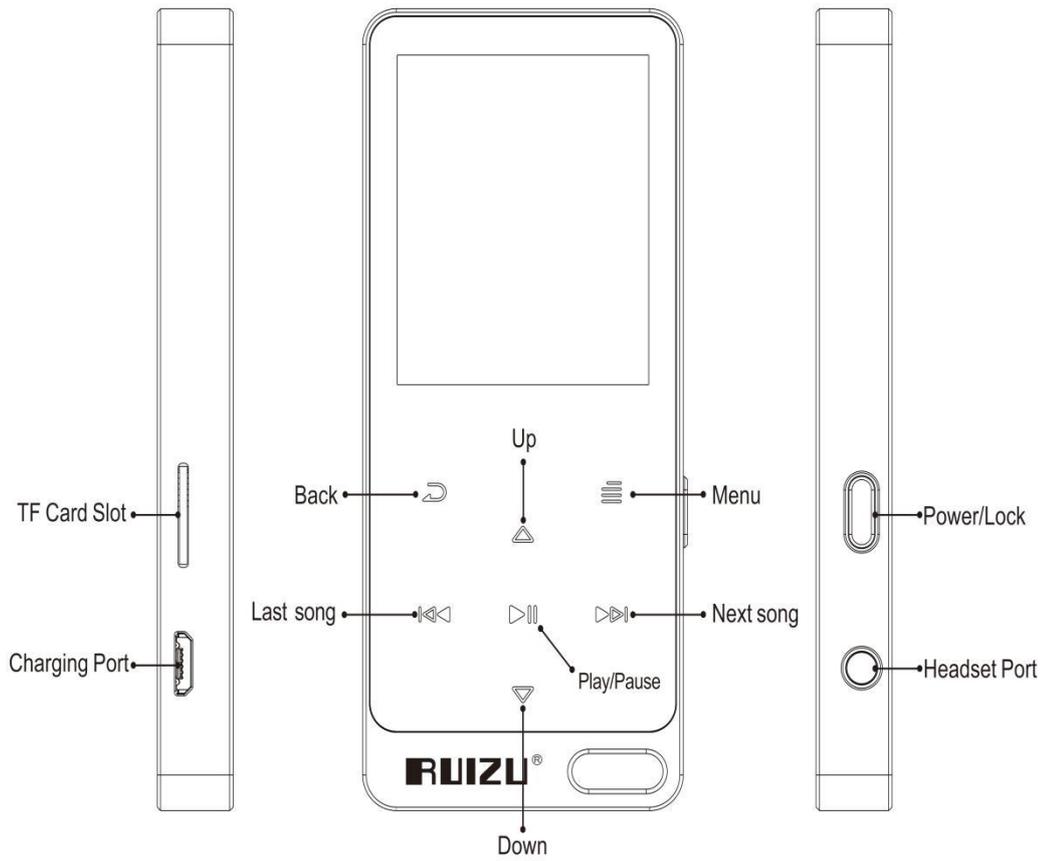

1.Charge the Player

1. Plug the attached USB cable into the USB port of a computer to charge the player.

When you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An indicate on the top right will show the charging statue.

2. Use only the 5V/500mA charger for charging or it may lead to product failure.

2.Power On/Off

Hold the Power button 3 seconds on the right to switch on/off the player.

3.Date Transfer

Plug it into your computer and copy over media files with the attached USB cable as if it were a flash driver or use music management software such as Windows Media Player to transfer the files.

Note: if your computer cannot detect the MP3 Player, try to update your USB driver or use another cable. If it still can't work for you. Ask RUIZU Customer Service for additional help (See Cover)

4.Lock Screen

Press power button to lock the screen. Repeat to unlock.

Note: Lock Screen will make buttons not working. If you accidentally locked your screen , just press power button to unlock.

5.Return

While on playing interface, touch the button  to exit.

6. Volume Adjustment

While on playing interface, touch  /  to adjust sound volume.

Note: There's a built-in speaker in RUIZU X19 MP3 Player, the speaker will turn on automatically when no earphones are plugged in.

Record

Touch  button with "Record" on main interface to access to its function. And then a related list will show as follows:

1.Start voice recording

Select "Start voice recording" and touch  button to start your recording. touch  and then touch  button to save your recording; When it's on recording interface, touch the  button to pause or start.

2.Recordings library

View your recording files in "Recordings library". touch  button to play the recordings. Touch  /  to go to the previous/next recording.

3.Record Format

Select a format among MP3, WAV, ACT.

4.Record Setting

Select rec bit rate: Select among 512/768/1024/1536kbps.

Track AVR mode: Select between Normal and AVR mode

set recording scene: Select among scenes for recording.

Folder

Touch  button with "Folder" on main interface to access to its function.

All the files and folders in the player will be listed. If the micro SD card is inserted, you can choose to go to "Local folder" or "Card folder".

Note: Create your own folders to sort your songs.

Ebook

Touch  button with "Ebook" on main interface to access to its function.

Please kindly note this player only can recognize the article in TXT format. touch middle button to enter.

Auto Play

While reading the text, touch  button to play automatically, touch again to back to normal playing.

Settings

While on text reading scene, touch  button to go to its sub-menu. A related list will show:

Home

Back to Main interface.

Playsetting

Set how many seconds per page for auto play.

Delete ebook

Delete the ebook you current reading.

Bookmark Select

Select a bookmark added before.

Delete bookmark

Delete a bookmark added before.

Add bookmark

Add a bookmark on current page.

Page Select

Select a page you want to go.

Pictures

Touch  button with “Pictures” on main interface to access to its function.

Settings

While it's on picture viewing interface, touch  button to access to its sub-menu. The related list will show:

Home: Back to Main interface.

Backlight timer: Set time backlight turn off.

Slideshow settings:

Time per slide: Set how many seconds for a slide.

Repeat: Turn on/off repeat mode.

Shuffle: Turn on/off shuffle mode.

Thumbnail: Turn on/off thumbnail mode.

Delete picture: Delete the currently viewing picture.

Update Card Data: Update the Data you just edited.

Music

Touch  button with “Music” on main interface to access to its function. And then a related list will show as follows:

Now Playing: View the music currently playing.

All songs: View the music list in alphabet order.

Artists: Play songs from Artist you like.

Albums: Play songs from Album you like.

Genres: Play songs from Genres you like.

Album art: View the covers of album.

Playlists: Play songs from 1 of 3 playlists.

Update Card Data: Update the Data you just edited.

1. Rewind/Forward

While it's on music playing interface, touch button  to go to the previous/next song.

Hold button  for fast rewind/ forward.

2. Settings

While it's on music playing interface, touch  button to access to its sub-menu. The related list will show:

2.1 Home

Back to main interface.

2.2 Shuffle

Turn on/off shuffle mode.

2.3 Repeat

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the audio currently playing.

Repeat all: Play all of your audios and repeat.

View Playing: View the audio currently playing.

2.4 Bookmarks

Add bookmark: Save audio play at certain time as bookmark.

Go to bookmark: Go to your saved bookmark.

Delete bookmark: Delete saved bookmark

2.5 Play from...

...All song: Play all songs in your mp3 player.

...this artists: Play songs by certain artist.

...this album: Play songs by certain album.

...this genre: Play songs by certain genre.

2.6 Delete

Delete the currently playing song from Mp3 player or card.

2.7 Sleep timer

Set time into sleep mode automatically.

2.8 Equalizer

Choose from the 7 sound effects, or choose "off" to turn off equalizer.

2.9 Speed

Adjust speed from -8(Slowest) to +8(Fastest).

MP3 and WAV format only.

2.10 A-B Repeat Mode

There are 3 options in A-B Repeat Mode:

A-B Repeat: Play music as A-B loop.

1) Enter Replay Mode, an "A" on the bottom left will flash.

touch button  to set a start time.

- 2) The “B” on the bottom left will flash once you touch button **▶▶**. Touch button **▶▶** again to set an end time and begin A-B loop, or touch button **◀◀** to reset a start time.
- 3) touch button **▶▶** again to end the A-B loop.

Replay Times: Set how many times will A-B loop play.

Replay Interval: Set how many seconds interval at beginning of A-B loop play.

2.11 Add to playlist

Add the currently playing song to 1 of 3 playlists.

2.12 Remove from playlist

Remove the currently playing song from 1 of 3 playlists.

Video

Touch  button with “Video” on main interface to access to its function.

Settings

While it's on video playing interface, touch  button to access to its sub-menu. The related list will show:

Home: Back to Main interface.

Repeat:

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the video currently playing.

Repeat all: Play all of your videos and repeat.

Delete video: Delete the currently playing video.

Update Card Data: Update the Data you just edited.

Note: This player can only support the AMV format in 160*128, you should convert video files by format conversion software first.

Tools

Touch  button with "Tools" on main interface to access to its function. And then a related list will show "Calendar", "Stopwatch", "Alarm".

1.Calendar

Choose "Calendar", touch button  to access to its function and view the date and time. touch button  to go back.

2.Stopwatch

Choose "Stopwatch", touch button  to access to its function.

Touch  again to start the timer, then touch  again to stop/resume. touch VOL to start a new one. touch  to go back.

Please note: the maximum Stopwatch list is 5.

3.Alarm

Choose "Alarm", touch button  to access to its function and set the alarm switch/time/cycle/music/volume you want.

Setting

Touch  button with “Setting” on main interface to access to its function. And then a related list will show as follows:

Play mode: Set up “Play music from...”, “Repeat”, “Shuffle”.

Sound settings: Set up Equalizer.

Power Off: Set up time of auto turn off.

Sleep timer: Set up time of into sleep mode.

Display settings: Set Brightness and Backlight timer.

Date and time: Set Date and time.

Language/Language: Select a system language.

Information: Show information about system and disk space.

Format device: Delete all data in Mp3 system.

Factory settings: Reset to Factory settings.

Radio

Touch  button with “Radio” on main interface to access to its function. And then a related list will show as follows:

Note: Wired headphones are required as antenna for FM radio function.

Station list: Play the FM radio frequency you saved before.

Manual tune: Manual Searching FM signal (87.50-107.00Hz).

Auto tune: Auto Searching FM signal and save to “Station list”.

FM Recording: Play recorded FM radio.

Settings

While on radio playing screen, touch  button go to its sub-menu. A related list will show:

Home

Back to Main interface.

Previous menu

Back to previous menu.

Start FM radio recording

Record current playing FM radio.

Save

Save current FM frequency to “Station list”.

Clear preset

Clear one of saved FM frequency from “Station list”.

Auto tune

Auto Searching FM signal and save to “Station list”.

Tuner Region

Select among Common Band, Japan Band, European Band

FM Recording

Play recorded FM radio.

Support and Troubleshooting

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk. You can create folders in the disk to sort your music.

Q: Why my computer can't detect mp3 player?

A: RUIZU Mp3 player can be paired for all computer system with latest USB driver. Please update your USB driver before plug in Mp3 player or try another charging cable. If you still can't connect RUIZU Mp3 Player to your computer, please contact RUIZU customer service team for additional help(See Cover).

Q: How can I continue audio play after turn the player off?

A: You can not continue your play after turn off the player. However, if the player is in sleep mode, you can continue your play by wake it up. See "Basic Operations" about how to get into sleep mode.

Q: Why buttons on the player can't work?

A: Sometime customer will accidentally active lock screen function which prevent button been used. Please see "Lock Screen" to unlock the button. If it still won't work for you, please contact RUIZU Customer Service to claim your warranty. See Cover.

Specifications

Screen	1.8" LCD screen
Weight	45g
Dimension	89*38*9mm
Flash memory	8G
Audio format	MP3/WAV/APE/WMA/FLAC etc.
Video format	160*128 AMV(converted video)
Recording format	MP3/WAV/ACT
Recording range	5-8 meters
Playing time	48 hours earphones/6 hours speaker
Battery	3.7 V/330 mAh
Charging time	1-1.5 hours
SD card expansion	Up to 128G
Lyric Format	LRC

Any more problems, please feel free to contact with our customer service at ruizuservice@hotmail.com