


RUIZU Music Player X50

User Manual

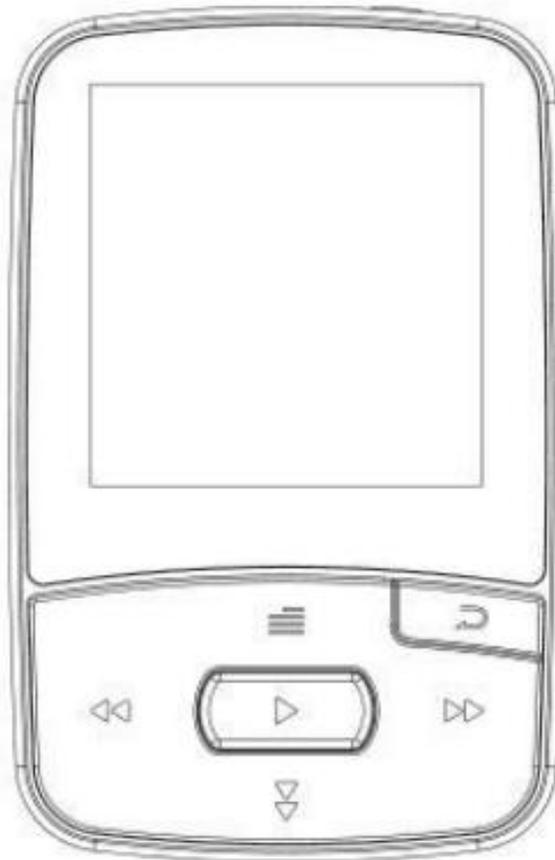

RUIZU Customer Service

ruizuservice@hotmail.com

User Guide

Quick Guide.....	1
Basic Operations.....	2
1.Charge the Player.....	3
2.Power On/Off.....	3
3.Date Transfer.....	3
4.Lock Screen.....	4
5.Return.....	4
6.Volume Adjustment.....	4
Music.....	5
1. Rewind/Forward.....	5
2. Settings.....	5
1.1 Play mode.....	6
1.1.1 Play music from	6
1.1.2 Repeat.....	6
1.1.3 Shuffle.....	6
1.1.4 Repeat settings.....	6
1.2 Sound Settings.....	7
1.3 Add to playlist.....	8
1.4 Remove from playlist.....	8
1.5 Delete.....	8
1.6 Bookmarks.....	8


Video.....	9
Recordings.....	10
1.Start voice recording.....	10
2.Recordings library.....	10
3.Record Format.....	10
4.Record Setting.....	10
FM radio.....	11
Pictures.....	13
Ebook.....	14
Tools.....	16
Set.....	17
Folder view.....	18
Bluetooth.....	19
Pedometer.....	20
Support and Troubleshooting.....	21
Specifications.....	23

Quick Guide

While the player is powered on, click button  to access to its 11 different functions, including Music, Video, Recordings, FM radio, Pictures, Ebook, Tools, Set, Folder view, Bluetooth, Pedometer. Press  button to enter.

Plug your earphone into the jack to enjoy the music and radio you like.

Basic Operations

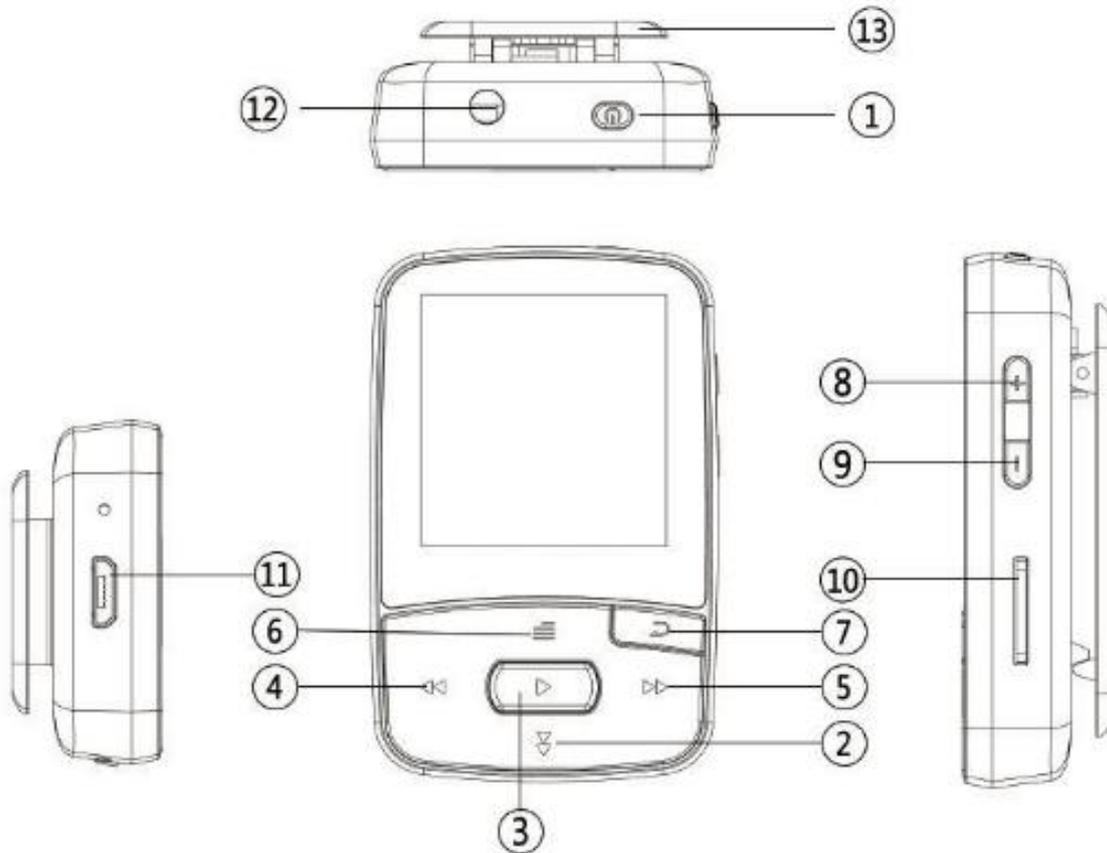

- | | |
|--------------------|--------------------------|
| 1. Power On/Off | 2. Scroll down |
| 3. Play/Pause | 4. Previous/Rewind |
| 5. Next/Forward | 6. Menu button/Scroll up |
| 7. Return | 8. Volume up |
| 9. Volume down | 10. Card slot |
| 11. Micro USB jack | 12. Earphone jack |
| 13. Clip | |

1.Charge the Player

1.Plug the attached USB cable into the USB port of a computer to charge the player. When you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An indicate on the top right will show the charging statue.

2.Use only the 5V/500mA charger for charging or it may lead to product failure.

2.Power On/Off

Hold the power button  for 3 seconds to switch on/off the player.

3.Date Transfer

Plug it into your computer and copy over media files with the attached USB cable as if it were a hard drive or use music management software such as Windows Media Player to transfer the files.

Note: if your computer cannot detect the MP3 Player, try to update your USB driver or use another cable. If it still can work

for you. Ask RUIZU Customer Service for additional help (See Cover)

4.Lock Screen

Hold button  for 3 seconds to lock the screen. Repeat to unlock.

Note: Lock Screen will make buttons not working. If you accidentally locked your screen , just hold button 3s to unlock.

5.Return

While on playing interface, Press the button  to exit,

6.Volume Adjustment

Click the button +/- on the left side to increase/decrease the volume.

Music

Press ► button with “Music” on main interface to access to its function. And then a related list will show as follows:

Now Playing: View the music currently playing.

All songs: View the music list in alphabet order.

Artists: Play songs from Artist you like.

Albums: Play songs from Album you like.

Genres: Play songs from Genres you like.

Playlists: Play songs from 1 of 3 playlists.

Update Playlist: Update the playlist you just edited.

1. Rewind/Forward

While it's on music playing interface, click button ◀ / ▶ to go to the previous/next song.

Hold button ◀◀ / ▶▶ for fast rewind/ forward.

2. Settings

While it's on music playing interface, click button ≡ to access to its sub-menu. The related list will show:

1.1 Play mode

1.1.1 Play music from ...

...All song: Play all songs in your mp3 player.

...this artists: Play songs by certain artist.

...this album: Play songs by certain album.

...this genre: Play songs by certain genre.

1.1.2 Repeat

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the song currently playing.

Repeat all: Play all of your songs and repeat.

View Playing: View the music currently playing.

1.1.3 Shuffle

Turn on/off the shuffle play mode.

1.1.4 Repeat settings

There are 3 options in Replay settings:

Replay Mode: Play music as A-B loop.

- 1) Enter Replay Mode, an "A" on the top left will flash. Press button ►► to set a start time.
- 2) The "B" on the top left will flash once you Press button ►►. Press button ►► again to set an end time and begin A-B loop, or press button ◀◀ to reset a start time.
- 3) Press button ►► again to end the A-B loop.

Replay Times: Set how many times will A-B loop play.

Replay interval: Set how many seconds interval at beginning of A-B loop play.

1.2 Sound Settings

There are 3 options in Sound settings:

Equalizer: Choose from the 7 sound effects, or choose "off" to turn off equalizer.

Variable Speed Playback: Adjust speed from -8(Slowest) to +8(Fastest).

Volume limit: Press the button +/- on the left side to increase/decrease the volume.

1.3 Add to playlist

Add the currently playing song to 1 of 3 playlists.

1.4 Remove from playlist

Remove the currently playing song from 1 of 3 playlists.

1.5 Delete

Delete the currently playing song from Mp3 player or card.

1.6 Bookmarks

Add bookmark: Save audio play at certain time as bookmark.

Go to bookmark: Go to your saved bookmark.

Delete bookmark: Delete saved bookmark

Video

Press ► button with “Video” on main interface to access to its function.

Settings

While it's on video playing interface, click button ☰ to access to its sub-menu. The related list will show:

Brightness: Adjust the brightness of screen.

Repeat:

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the video currently playing.

Repeat all: Play all of your videos and repeat.

Delete video: Delete the currently playing video.

Update Playlist: Update the playlist you just edited.

Note: This player can only support the AMV format in 128*128, you should convert video files by format conversion software first.

Recordings

Press ► button with “Recordings” on main interface to access to its function. And then a related list will show as follows:

1.Start voice recording

Select "Start voice recording" and click ► to start your recording. Press ↻ and then click ► to save your recording;

When it's on recording interface, click the button ► to pause or start.

2.Recordings library

View your recording files in "Recordings library". Click button ► to play the recordings. Click ◀/▶ to go to the previous/next recording.

3.Record Format

Select a format between MP3 and WAV.

4.Record Setting

Select rec bit rate: Select among 512/768/1024/1536kbps.

Track AVR mode: Select between Normal and AVR mode.

FM radio

Press ► button with “FM radio” on main interface to access to its function. And then a related list will show as follows:

Note: Wired headphones are required as antenna for FM radio function.

Note: Plug in wired headphones when play FM radio in Bluetooth Mode.

Presets: Play the FM radio frequency you saved before.

Manual tune: Manual Searching FM signal (87.50-107.00Hz).

Auto tune: Auto Searching FM signal and save to “presets”.

FM Recording: Play recorded FM radio.

Settings

While on radio playing screen, press button ☰ to go to its sub-menu. A related list will show:

Start FM radio recording

Record current playing FM radio.

Radio background

Turn on/off radio background.

Save to presets

Save current FM frequency to “presets”.

Clear preset

Clear one of saved FM frequency from “presets”.

Auto tune

Auto Searching FM signal and save to “presets”.

Tuner Region

Select among Japan Band, European Band, Radio background.

FM Recording

Play recorded FM radio.

Pictures

Press ► button with “Pictures” on main interface to access to its function.

Settings

While it's on picture viewing interface, click button ☰ to access to its sub-menu. The related list will show:

Brightness: Adjust the brightness of screen.

Backlight timer: Set time backlight turn off.

Slideshow settings:

Time per slide: Set how many seconds for a slide.

Repeat: Turn on/off repeat mode.

Shuffle: Turn on/off shuffle mode.

Thumbnail: Turn on/off thumbnail mode.

Delete picture: Delete the currently viewing picture.

Update Playlist: Update the playlist you just edited.

Ebook

Press ► button with "Ebook" on main interface to access to its function.

Please kindly note this player only can recognize the article in TXT format. Click ► button to enter.

Auto Play

While reading the text, click button ► to play automatically, click again to back to normal playing.

Settings

While on text reading scene, press button ≡ to go to its sub-menu. A related list will show:

Playsetting

Set how many seconds per page for auto play.

Delete ebook

Delete the ebook you current reading.

Bookmark Select

Select a bookmark added before.

Delete bookmark

Delete a bookmark added before.

Add bookmark

Add a bookmark on current page.

Page Select

Select a page you want to go.

Tools

Select "Tools" on main interface, click button A related list will show "Calendar", "Stopwatch", "Alarm".

1.Calendar

Choose "Calendar", click button ▶ to access to its function and view the date and time. Click button ↶ to go back.

2.Stopwatch

Choose "Stopwatch", click button ▶ to access to its function.

Click ▶ again to start the timer, then click ▶ again to stop/resume. Press ▶▶ to start a new one. Click ↶ to go back.

Please note: the maximum Stopwatch list is 5.

3.Alarm

Choose "Alarm", click button ▶ to access to its function and set the alarm switch/time/cycle/music/volume you want.

Set

Press ► button with “Set” on main interface to access to its function. And then a related list will show as follows:

Display: Set Screensaver, Backlight time, Brightness.

Shutdown settings: Set Sleep timer and Power management.

Date&Time: Set Date and time.

Language: Select among 1 of 28 system languages.

Information: Show information about system version and disk space.

Format Internal Memory: Delete all data in Mp3 system.

Factory Default: Reset to Factory Default.

Folder view

Press ► button with “Folder view” on main interface to access to its function.

All the files and folders in the player will be listed. If the micro SD card is inserted, you can choose to go to "Local folder" or "Card folder".

Note: Create your own folders to sort your songs.

Bluetooth

Press ► button with “Bluetooth” on main interface to access to its function. And then a related list will show as follows:

Bluetooth switch control: Turn on/off Bluetooth function.

Search for device: Searching nearby Bluetooth device.

Device List: View paired Bluetooth devices.

Select “Search for device” to search nearby Bluetooth device.

Select device name and choose “match” to pair.

After pairing complete, go back and play your musics.

Note: Plug in wired headphones when play FM radio in Bluetooth Mode.

Note: Pedometer can not be used during Bluetooth Mode.

Pedometer

Select "Pedometer" on main interface, click button ► to access to its function, then a related list will show:

Start step:

S: step counts

D: distance traveled

C: calories burned

S: walking speed

T: elapsed time

Click button ↶ and choose "Yes"/"No" to save the record.

Personal info: set your step length.

History: View up to 7 history records.

Clear history: Clear one of your history records.

Support and Troubleshooting

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk. You can create folders in the disk to sort your music.

Q: Why my computer can't detect mp3 player?

A: RUIZU Mp3 player can be paired for all computer system with latest USB driver. Please update your USB driver before plug in Mp3 player or try another charging cable. If you still can't connect RUIZU Mp3 Player to your computer, please contact RUIZU customer service team for additional help(See Cover).

Q: How can I continue audio play after turn the player off?

A: You can not continue your play after turn off the player. However, if the player is in sleep mode, you can continue your play by wake it up. See "Basic Operations" about how to get into sleep mode.

Q: Why can't play FM radio in Bluetooth Mode?

A: FM radio need wired headphones as antenna, Please see "FM radio" about how to play FM radio in Bluetooth mode.

Q: Why buttons on the player can't work?

A: Sometime customer will accidentally active lock screen function which prevent button been used. Please hold button 3s to unlock. If it still won't work for you, please contact RUIZU Customer Service to claim your warranty. See Cover.

Specifications

Screen	1.5" LCD screen
Weight	25g
Dimension	59*38*16 mm
Flash memory	8G
Audio format	MP3/WAV/APE/WMA/FLAC etc.
Video format	128*128 AMV(converted video)
Recording format	MP3/WAV/ACT
Recording range	5-8 meters
Bluetooth range	5-10 meters
Playing time	48 hours for music playback
Battery	3.7 V/240 mAh
Charging time	1-1.5 hours
SD card expansion	Up to 128G
Lyric Format	LRC

Any more problems, please feel free to contact with our customer service at ruizuserice@hotmail.com